

## How to check engine oil quantity

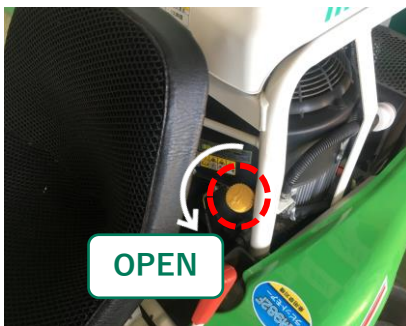
Required Time : 5Min

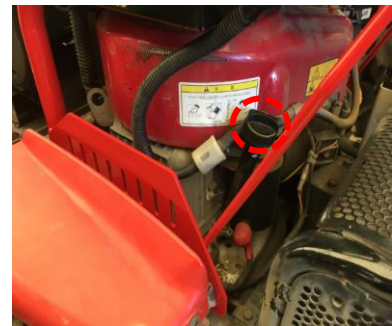
Required : Waste, (Flathead Screwdriver)

Engine oil will be gradually consumed, and if it is less than the specified quantity, it may cause seizure or malfunction of engine. Too much engine oil can also cause engine failure. Before starting work please check quantity of engine oil and oil leaking place if it is.

※If you check quantity of engine oil after working, oil level may not be confirmed correctly.

### ① Place the machine on flat surface and open the engine oil filling plug.

**KAWASAKI**

**HONDA**

**BRIGGS**


※ The model having plastic engine bonnet, open engine bonnet by hand and iron engine bonnet removing fixing pin with flathead screwdriver then open. For details please refer to instruction manual.

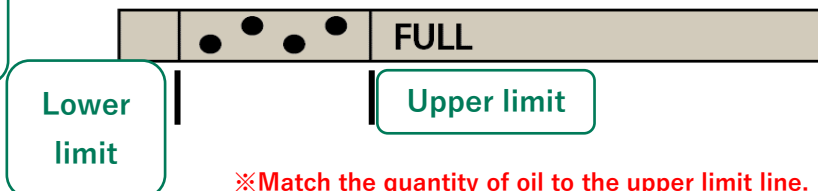
### ② Pull out the oil gauge, wipe it off with waste cloth and insert it again to check the oil quantity.



※ Checking engine oil quantity does differ depends on engine makers

**BRIGGS** : Tighten oil stopper and confirm it.

**KAWASAKI, HONDA** : Just put it without tightening.



※Match the quantity of oil to the upper limit line.

If oil quantity is insufficient please add engine oil to adjust oil quantity.

If oil color is black and dirty, please replace the oil.

**Oil change timing : First time 50 hours    Second time 100 hours and above**

※If you don't have equipment and tools, please ask to your nearest store.