

**Fuel Cock Position**

**Required Time : 1 Mintues**

**Necessary Tool : None**

The fuel cock controls the flow of gasoline out of the gasoline tank.  
You need to open the fuel cock when you start the engine. **Close the fuel cock during transport or long term storage.**

The location of the fuel cock depends on the engine.

**KAWASAKI, BRIGGS**



The location of the fuel cock depends on the engine.(Picture from the kawasaki engine)

Make the lever level with hose 『OPEN』



If the lever is prependicular to hose, it is closed.



**HONDA**




Honda engine mounted on right front, it is under air cleaner.

Use the red-circle lever in the left picture.

Front 『Closed』 , Back 『Open』

Fuel cock lever

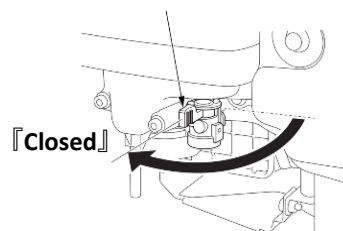

Fuel cock lever

