


Safety Switch Location

Required Time : 5 Mintues

Necessary Tool : Spanner (12mm)

Rabbit mower has three safety switched that allow to detects whether the switch is pressed or not, to prevent the engine from starting or to stop the engine. **If the pilot light (Green light near Key) is lit and the battary is normal but cell motor does not turn , safety switches may not have been pressed, so check and adjust it.**

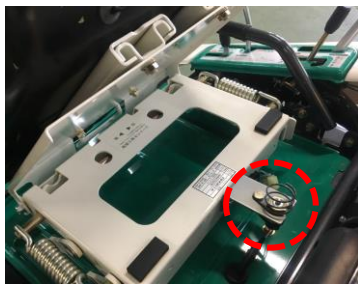

① Safety switch under seat


A safety switch is attached under seat to detect wheather person is seated firmly on seat. Make sure that switch is not stuck or disconnected.

Different models look different from images.

② Safety switch linked to brake

If you open seat bracket under seat, you can see safety switch that is linked to brake. Make sure switch is pressed firmly when brake is locked.


If switch can not be pressed, adjust the bolt with a 12mm spanner.

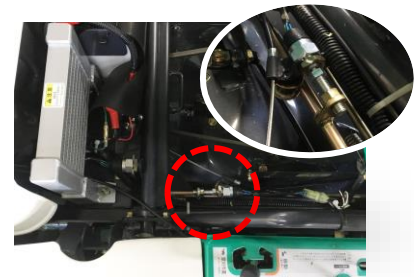

③ Safety switch linked with cutting height

There is a safety switch on rear side of the seat that is linked to cutting height. Make sure that switch is pressed firmly when cutting height is raised to top.

Some models may have different locations and may require adjustments.

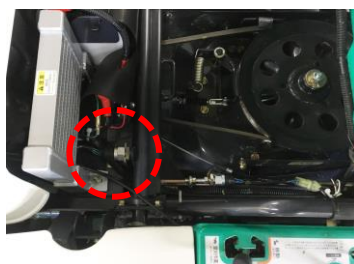

In case of RM983



In case of RM831

If symptom does not improve even though three safety switches have been pressed, it is possible that safety switch itself has failed or that other factors have caused a failure. Please check at your nearest dealer.