

## Cleaning Method of Air Cleaner

Required Time : 10 Min

Failure to clean the air cleaner causes serious failures, such as engine burping and malfunctioning.


### ① Remove the engine cover to take out air cleaner.

#### KAWASAKI



Turn of the knob  
and remove it.

#### HONDA

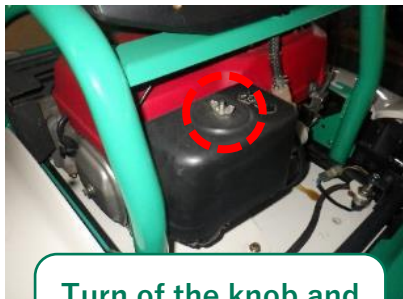




Turn of the knob and  
remove it.

#### BRIGGS



Open and remove  
nails

### ② Remove the element of air cleaner and clean it.

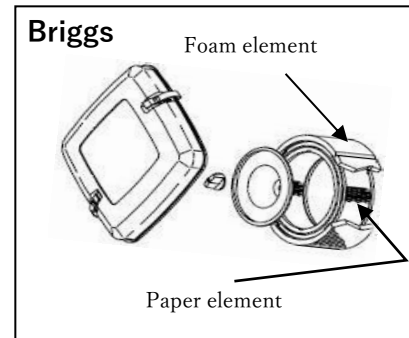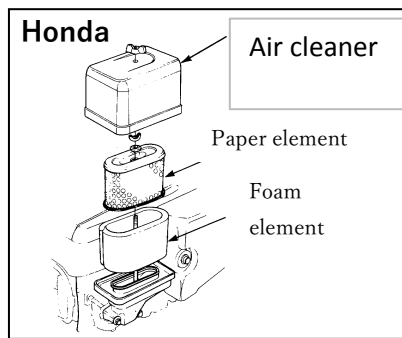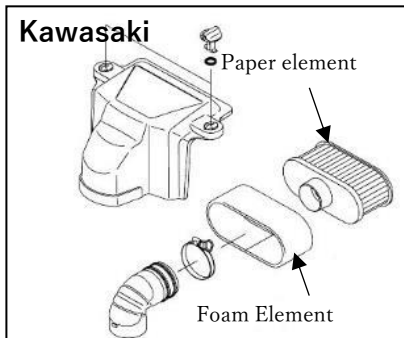

Wash the foam element (like-sponge) thoroughly with a neutral detergent and dry it. Paper element is compressed air to dust from the inside to outside.

**If both elements are extremely deteriorated, replace them with new ones.**

Work is completed by set back each element to proper place. Set up cover securely so that it will not fall off.

※If you do not have equipment and tools, Please ask your nearest store.