

How to check the engine oil level

Time required: 5 minutes

Tools needed : Oil , Oil jug , Rag , etc


※Too much or too little engine oil can cause engine failure and other malfunctions, including engine seizure.

Engine oil is consumed. Be sure to check the oil quantity and quality before starting work.


Please be careful when checking after work as the oil level may not be accurately measured.

① Place the product on a flat surface and make sure the engine base is level with the ground.


Horizontal Position

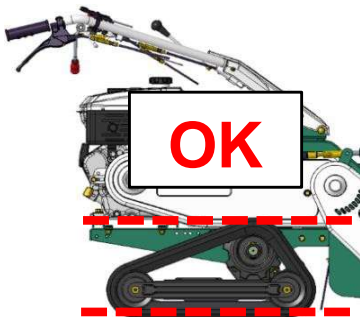

Front Downward

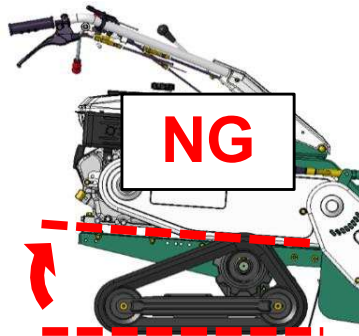


Rear Downward

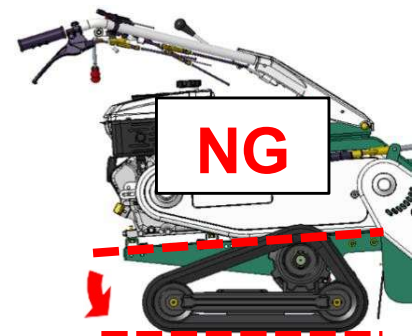

※Please note that if the engine base is not level, you will not be able to check the oil level correctly. The oil amount varies depending on the engine model, so please refer to the instruction manual for details.

② Pull out the oil gauge, wipe it with a rag, then insert it without screwing it in to check the oil level.

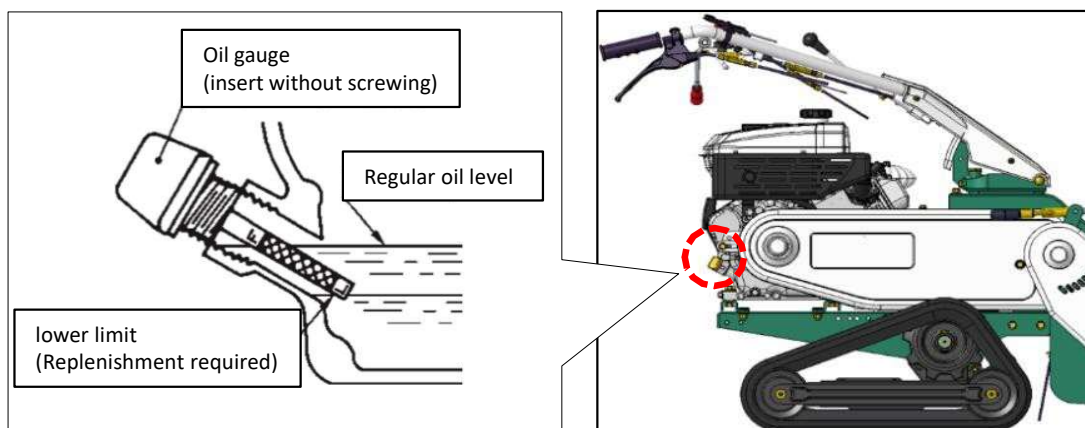

- Also check the oil pan of the air cleaner. (See separate document: How to clean the air cleaner.)
- If the amount of oil is insufficient, add more oil to adjust the amount to the appropriate level.
- If the oil is dark and dirty, replace it without adding more.

※If you do not have the equipment or tools, please ask your local dealer.