

Check tire pressure

Time required: 5 minutes

Tool needed : Air presser gauge

If the tire pressure is too high or too low, it may be damaged or lead to an accident.

Check the tire's contact area for deflection on a daily basis to see if the air pressure is low, and make sure to measure it with an air pressure gauge once a month to make sure it is correct.

※The appropriate tire pressure varies depending on the model and type of tire. Please check the appropriate value on the side of the tire or in the instruction manual.

Example of Tire markings



$1\text{kg}/\text{cm}^2 = 100\text{kPa}$

Tire size and pressure

	Lug tires (normal)		Turf Tire	
Front Tire	3.50-7	120 kPa	14 x 500-6	140 kPa
	4.00-7		16 x 450-9	
Rear Tire	16 x 7.00-8	140 kPa	16 x 650-8	100 kPa
	17 x 7.00-8		18 x 850-8	
	17 x 8.00-8	160 kPa		

① Remove the valve cap and check the air gauge value..



Point 1、 Measure when the tire is cold.

Point 2、 Check for air leaks from the valve.

Point 3、 Adjust the air pressure not to go below the specified value, and the upper limit should be around 10%!

※ If you do not have the equipment or tools, please ask your local dealer.