



# Parts Manual

Mfg. No: 25V337-0015-F1






---




<b>Model Components</b>	<b>Page</b>
Air Cleaner Group.....	4
Alternator Group.....	6
Blower Housing Group.....	8
Carburetor Group.....	10
Controls Group.....	12
Crankcase Cover/Sump and Lubrication Group.....	14
Crankshaft Group.....	16
Cylinder Group.....	18
Cylinder Head Group.....	20
Exhaust Group.....	22
Flywheel, Ignition, and Starter Group.....	24
Fuel Supply Group.....	26

Not For  
Reproduction

536

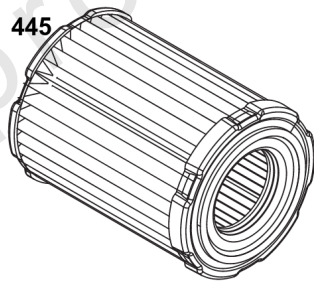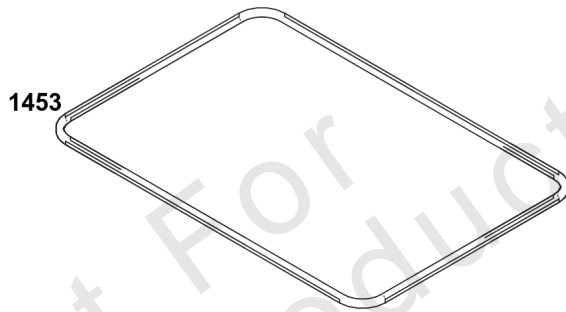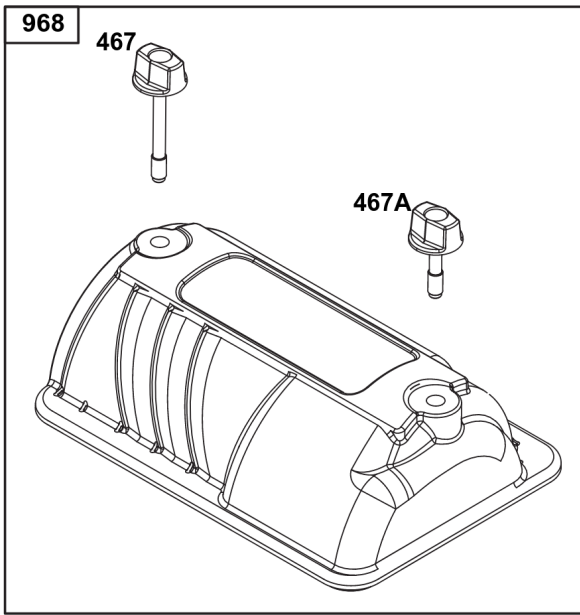


875

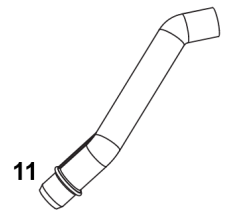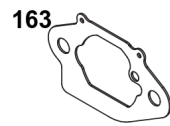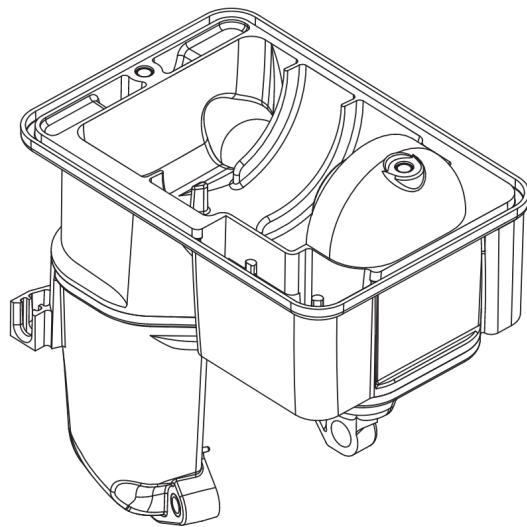

## ***Air Cleaner Group***

<b>REF NO</b>	<b>PART NO</b>	<b>QTY</b>	<b>DESCRIPTION</b>
11	84004191	1	TUBE, Breather
265A	-----	1	CLAMP, Casing -(Part information located in Controls Group.)
267A	-----	1	SCREW -(Part information located in Controls Group.)
163	-----	1	GASKET, Air Cleaner -(Part information located in Carburetor Group.)
445	84002310	1	FILTER, A/C Cartridge
467	84004159	1	KNOB, Air Cleaner Cover
467A	596759	1	KNOB, Air Cleaner Cover
536	84004266	1	CLEANER, Air
875	84004267	1	BASE, Air Cleaner
968	84004278	1	COVER, Air Cleaner
1406	84007679	1	VALVE, Debris
1453	84004276	1	SEAL, Air Cleaner Cover

Not For Reproduction

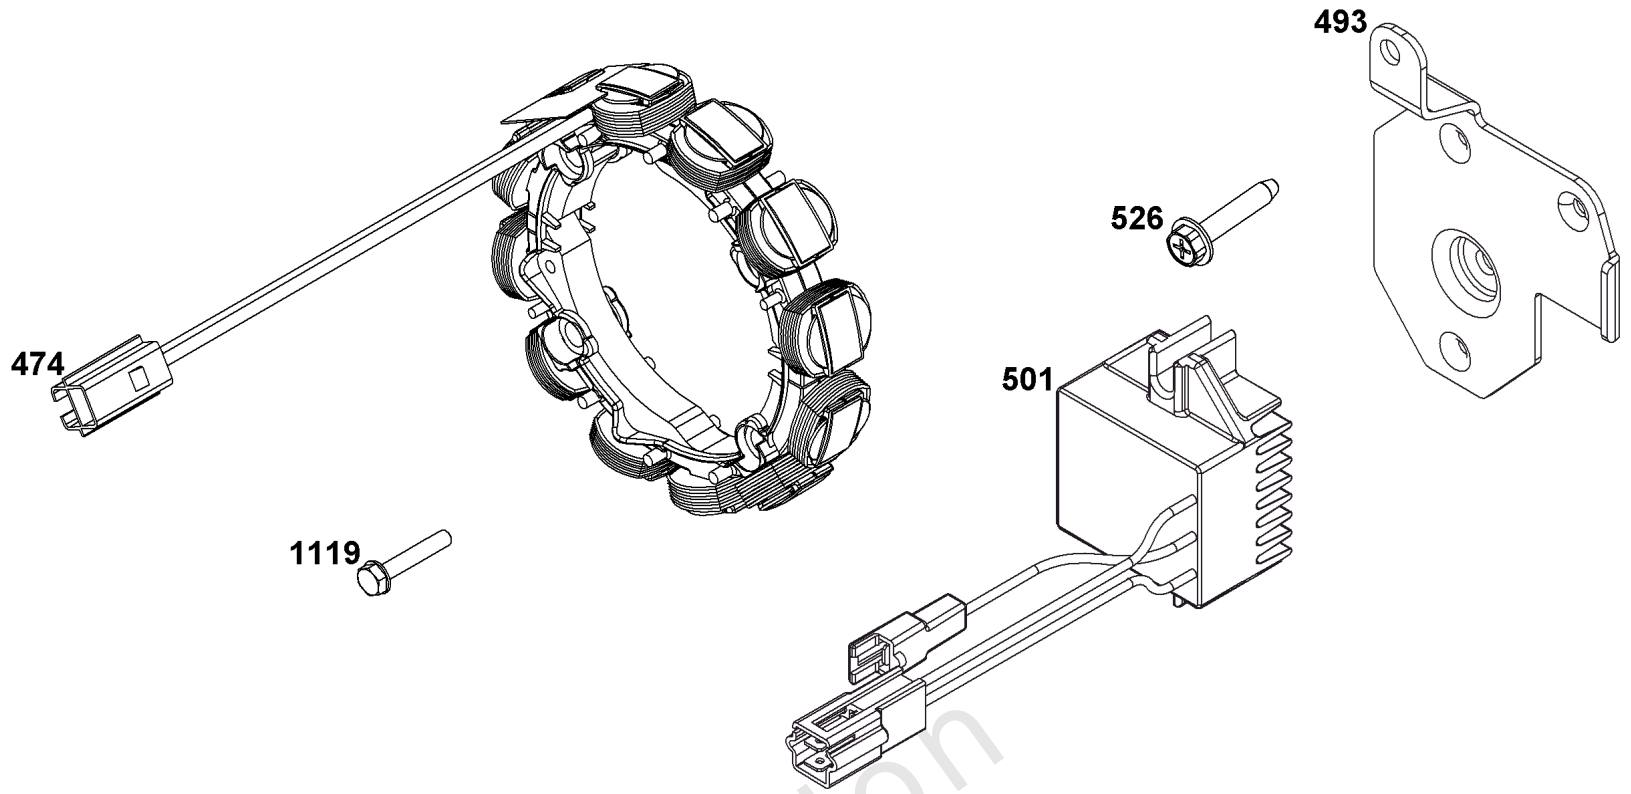



## Alternator Group


REF NO	PART NO	QTY	DESCRIPTION
474	790320	1	ALTERNATOR
493	84004283	1	BRACKET, Mounting
501	84002983	1	REGULATOR
526	847149	2	SCREW -(Regulator)
1119	699772	4	SCREW -(Alternator)


Not For Reproduction

1036 

1319 

1319B 


1319A 

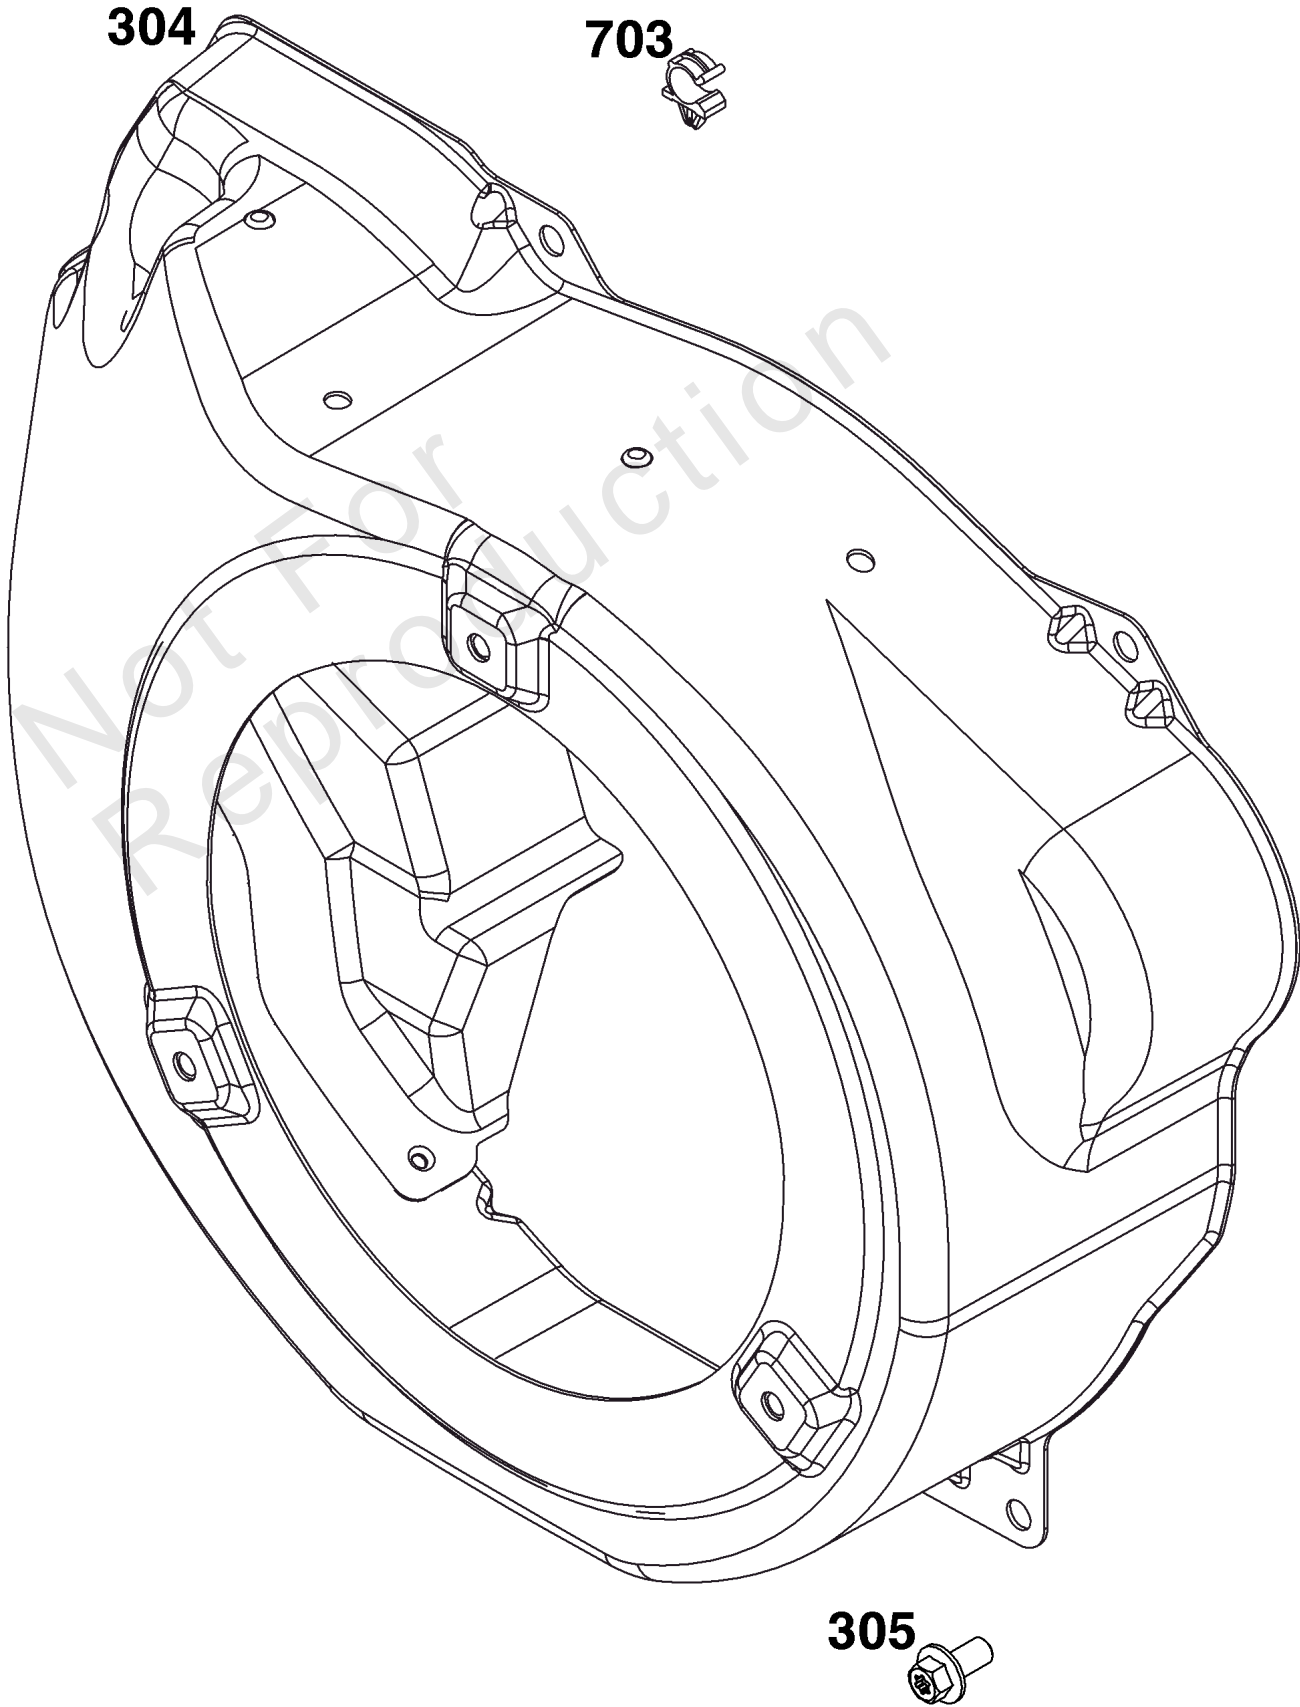

## Blower Housing Group


REF NO	PART NO	QTY	DESCRIPTION
304	84004566	1	HOUSING, Blower
305	597078	5	SCREW -(Blower Housing)
703	-----	1	CLIP -(Part information located in Fuel Supply Group.)
1036	-----	1	LABEL, Emissions -(Available from a Briggs & Stratton Authorized Dealer)
1319	794467	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)
1319A	797669	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)
1319B	278911GS	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)

Not For Reproduction

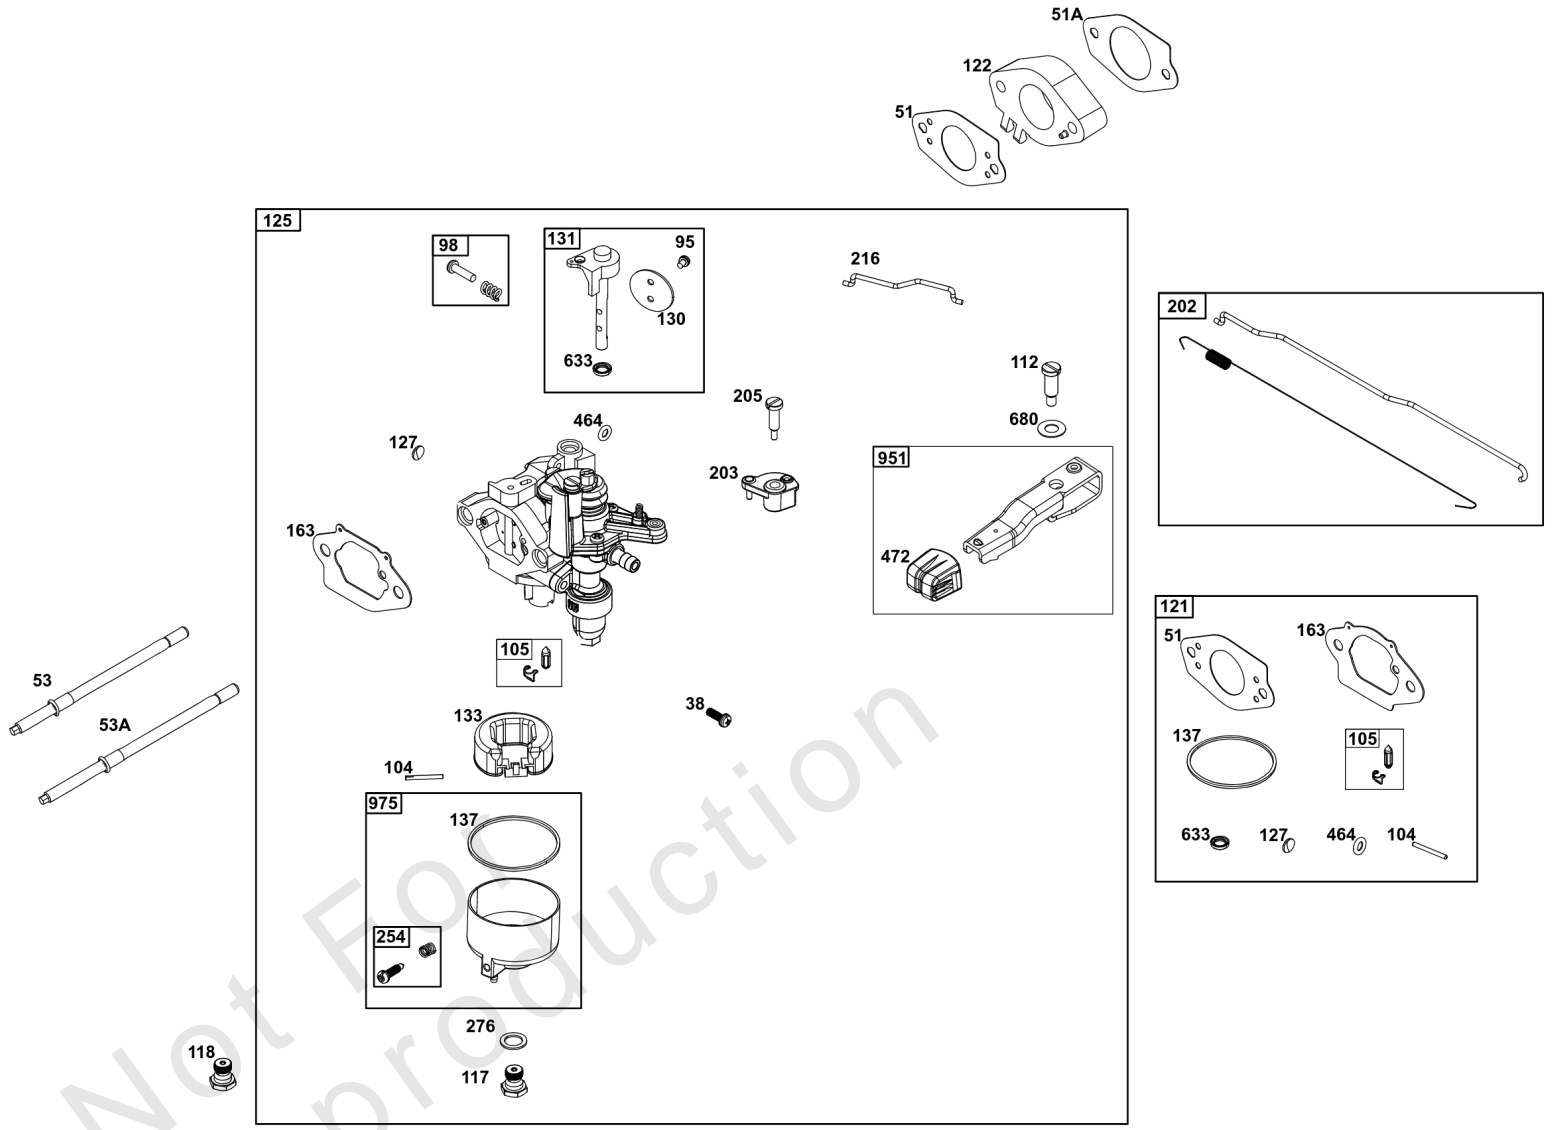



## Carburetor Group

REF NO	PART NO	QTY	DESCRIPTION
38	84004585	2	SCREW -(Fuel Shut Off Valve)
51	-----	1	GASKET, Intake -(Part information located in Cylinder Head Group.)
51A	-----	1	GASKET, Intake -(Part information located in Cylinder Head Group.)
53	84004315	1	STUD -(Carburetor) (Short)
53A	84004311	1	STUD -(Carburetor) (Long)
95	797161	2	SCREW -(Throttle Valve)
98	847139	1	KIT, Idle Speed
104	597533	1	PIN, Float Hinge
105	84004372	1	VALVE, Float Needle
112	84003640	1	SCREW -(Choke Lever)
117	84004687	1	JET, Main -(Standard)
118	84004688	1	JET, Main -(High Altitude)
121	84005292	1	KIT, Carburetor Overhaul -(Service Kits may include extra parts not specific to this engine.)
122	84004306	1	SPACER, Carburetor
125	84004368	1	CARBURETOR
127	84004841	1	PLUG, Welch
130	84004397	1	VALVE, Throttle
131	84004396	1	SEAL, Choke/Throttle Shaft
133	84004822	1	FLOAT, Carburetor
137	84004205	1	GASKET, Float Bowl
163	84004165	1	GASKET, Air Cleaner
202	-----	1	LINK, Mechanical Governor -(Part information located in Controls Group.)
203	597045	1	CRANK, Bell
205	84005081	1	SCREW -(Bell Crank)
216	84005080	1	LINK, Choke
254	595322	1	DRAIN, Carburetor Bowl
276	797632	1	WASHER, Sealing
464	595320	1	SEAL, O-Ring -(Fuel Shut-off Valve)
472	84002963	1	KNOB, Control
633	84004398	1	SEAL, Choke/Throttle Shaft
680	84005074	1	WASHER -(Choke Lever)
951	84004369	1	LEVER, Choke
975	84004204	1	BOWL, Float

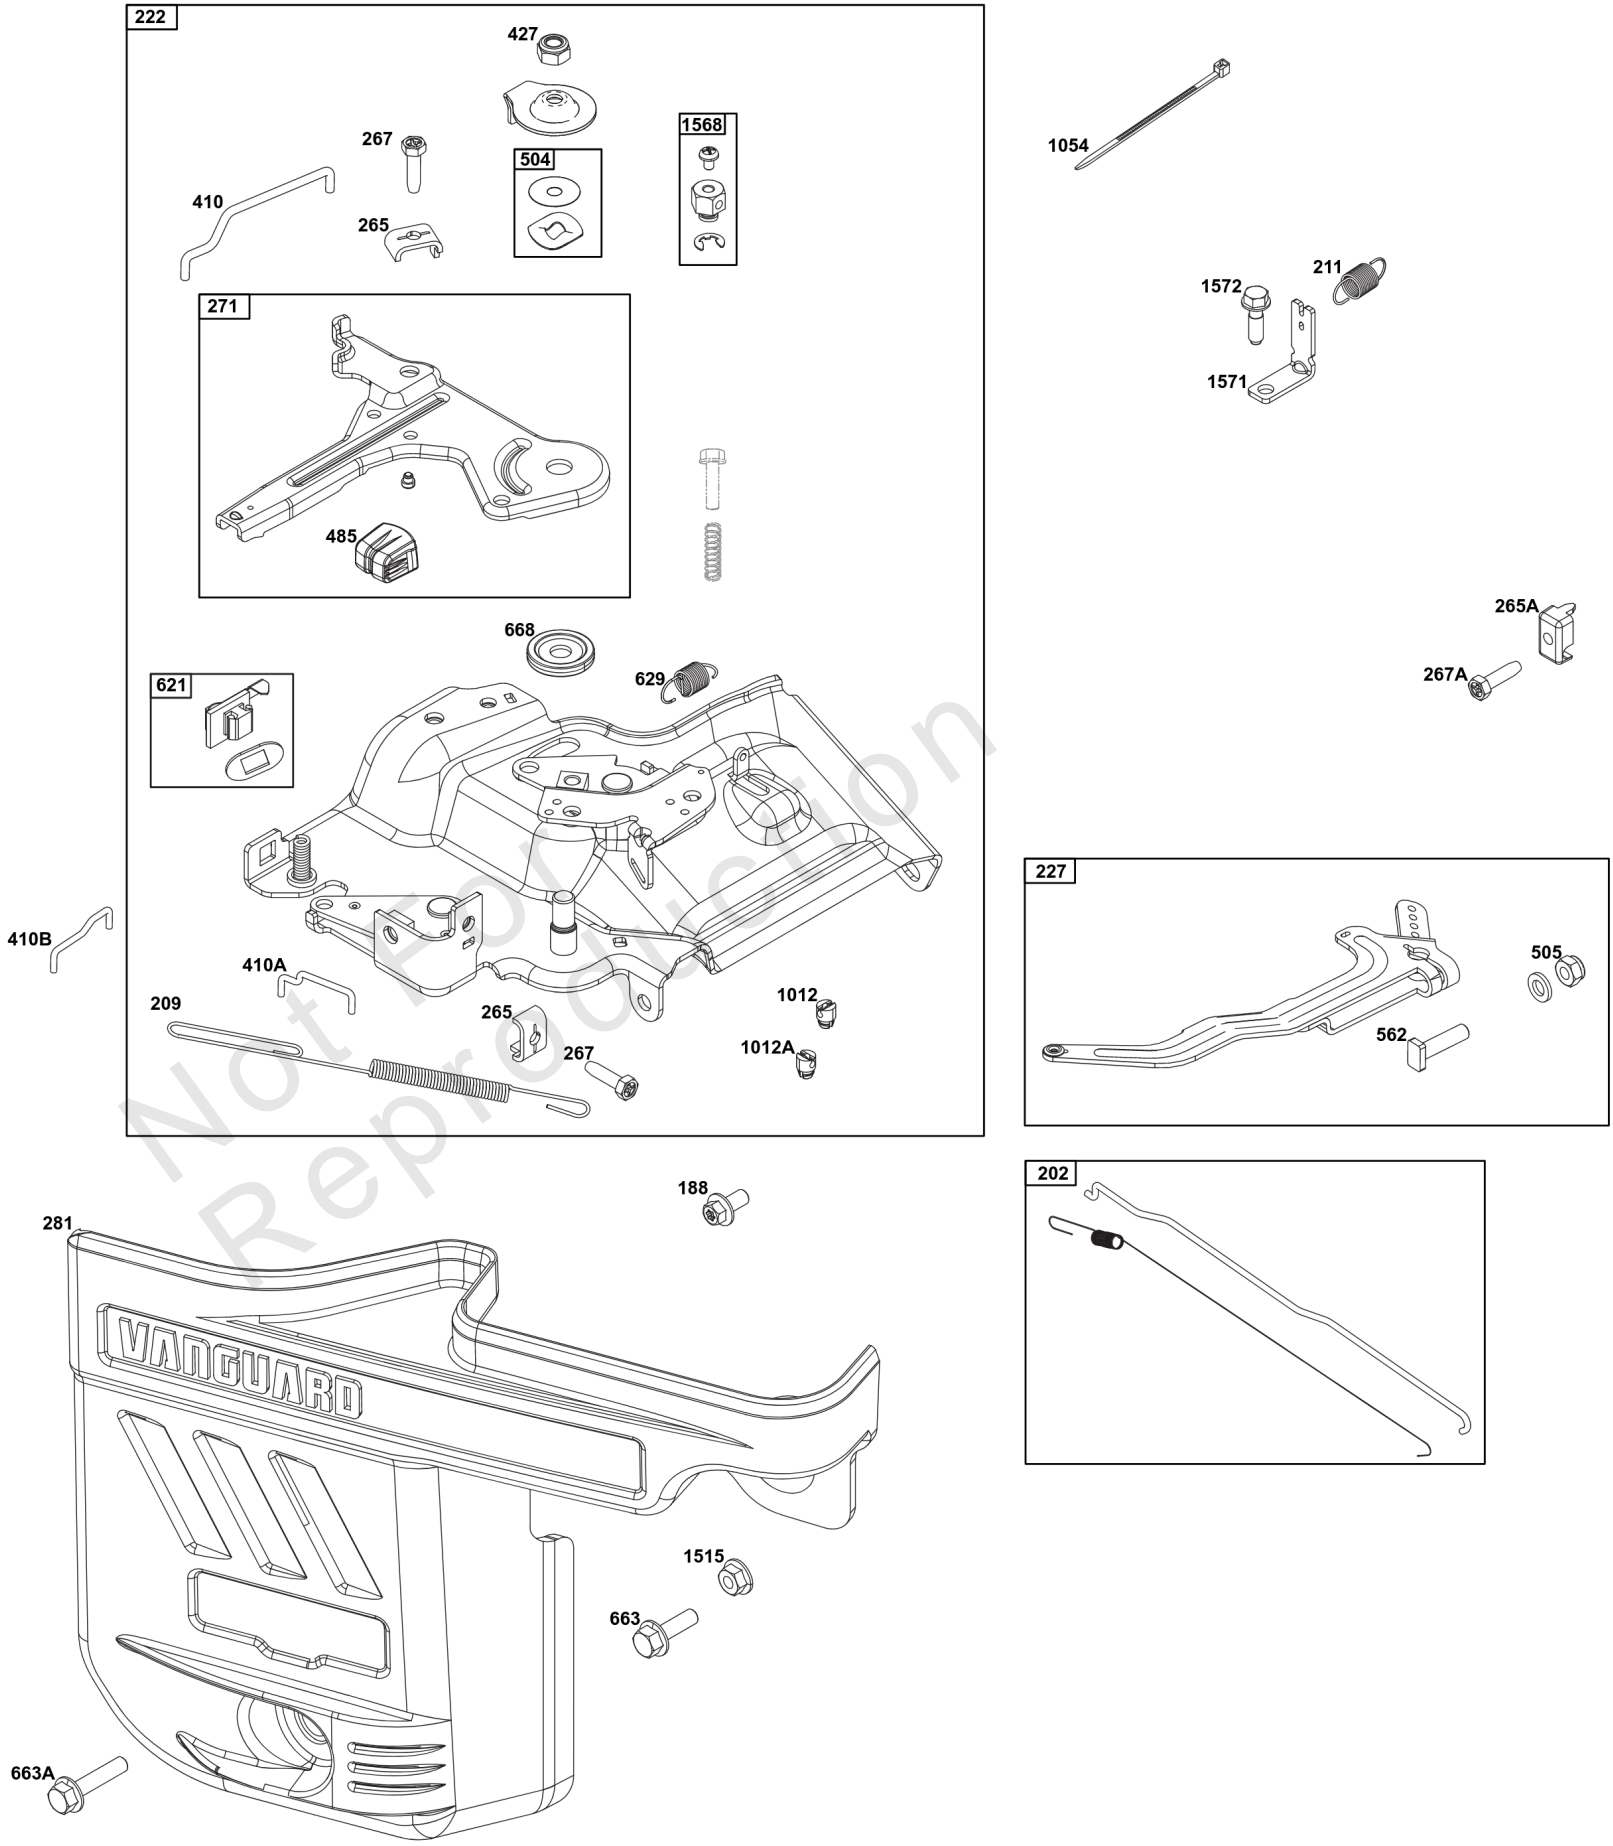








## Controls Group

REF NO	PART NO	QTY	DESCRIPTION
188	597078	1	SCREW -(Control Bracket)
202	84004199	1	LINK, Mechanical Governor
209	84004151	1	SPRING, Governor -(Use Before Date Code 21091500)
209	84007291	1	SPRING, Governor -(Use After Date Code 21091400) For 3500 RPM or Faster
211	691278	1	SPRING, Governor
222	84007292	1	BRACKET, Control -For 3500 RPM or Faster
227	84004195	1	LEVER, Governor Control
265	691024	2	CLAMP, Casing
265A	84004472	1	CLAMP, Casing
267	597027	2	SCREW -(Casing Clamp)
267A	84004279	1	SCREW -(Casing Clamp)
271	84005003	1	LEVER, Control
281	84004262	1	PANEL, Control
410	84004137	1	LINK, Control
410A	84004131	1	LINK, Control
410B	84004149	1	LINK, Control -(Use Before Date Code 21091500)
410B	84007289	1	LINK, Control -(Use After Date Code 21091400)
427	84004395	1	NUT -(Control Bracket)
485	84002965	1	KNOB, Control
504	84004943	1	SET, Friction Washer
505	590641	1	NUT -(Governor Control Lever)
562	597121	1	BOLT -(Governor Control Lever)
621	84007989	1	SWITCH, Stop
629	84004146	1	SPRING, Throttle Return
663	84004256	1	SCREW -(Control Panel)
663A	597460	1	SCREW -(Control Panel)
668	84004140	1	SPACER
1012	84004145	3	RETAINER, Link
1012A	84004144	2	RETAINER, Link
1054	280275	1	TIE, Cable
1515	590692	3	NUT -(Control Panel)
1568	84005001	2	RETAINER, Wire
1571	84004201	1	BRACKET, Governed Idle Spring
1572	597036	1	SCREW -(Governed Idle Spring Bracket)

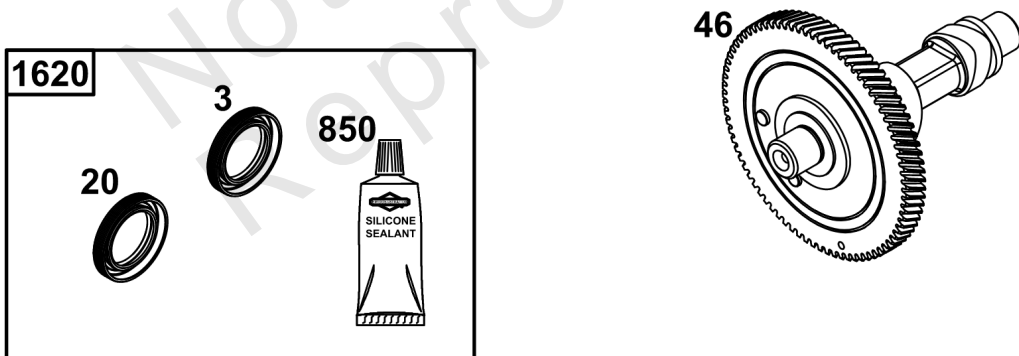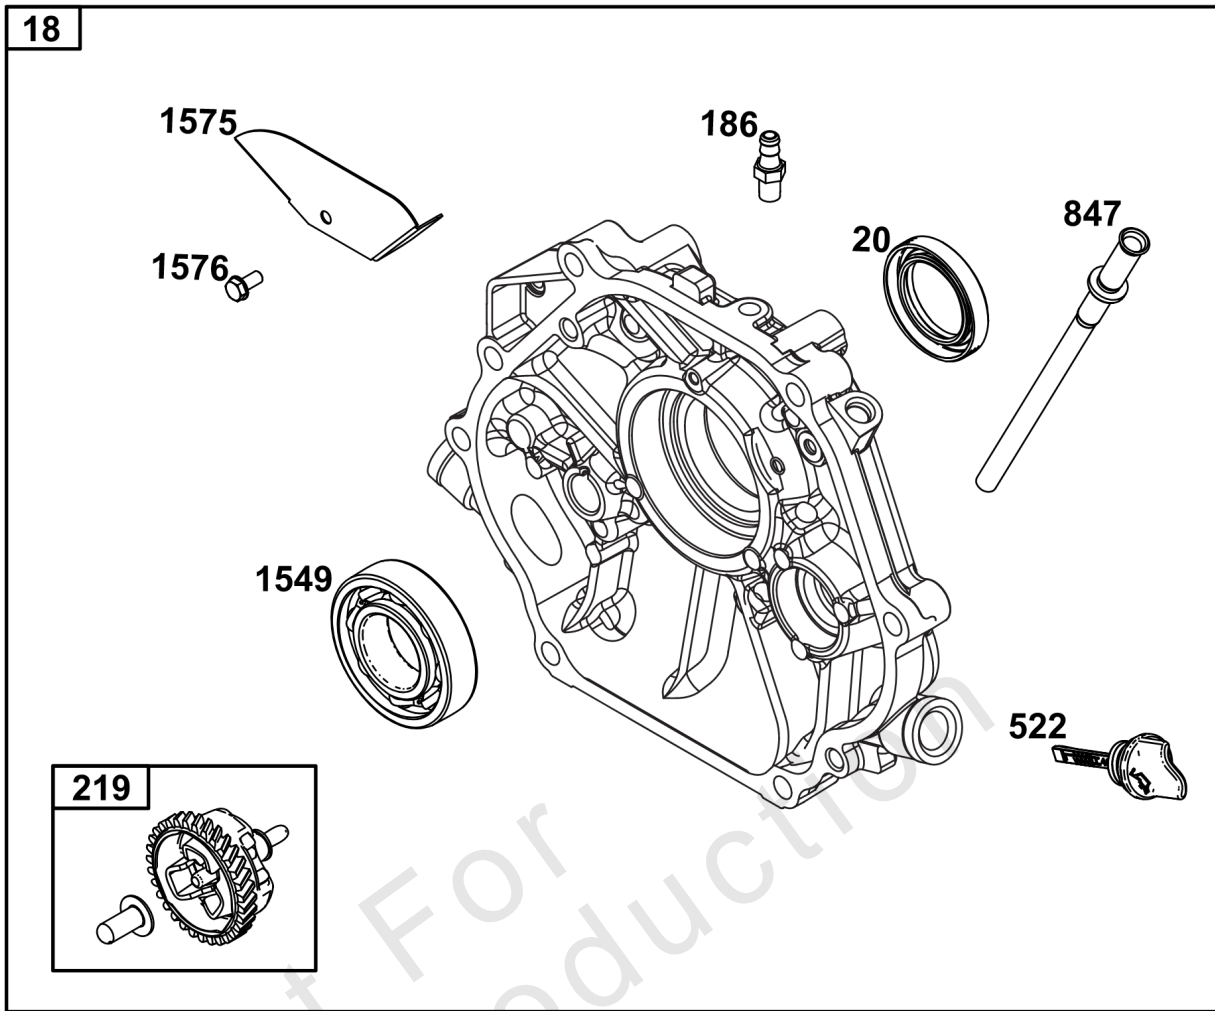






## Crankcase Cover/Sump and Lubrication Group

REF NO	PART NO	QTY	DESCRIPTION
3	-----	1	SEAL, Oil -(Part information located in Cylinder Group.)
18	84004478	1	COVER, CRANKCASE
20	84004101	1	SEAL, Oil -(PTO Side)
22	84004103	7	SCREW -(Crankcase Cover/Sump)
46	-----	1	CAMSHAFT -(Part information located in Crankshaft Group.)
186	-----	1	CONNECTOR, Hose -(Part information located in Fuel Supply Group.)
219	84004200	1	GEAR, Governor
522	84004104	2	PLUG, Dipstick/Fill
523	84004105	1	DIPSTICK
718A	-----	2	PIN, Locating -(Part information located in Cylinder Group.)
847	84004831	1	TUBE, Dipstick
850	-----	1	SEALANT, Liquid -(Part information located in Cylinder Group.)
1549	-----	1	BEARING, Ball -(Part information located in Crankshaft Group.)
1575	84004192	1	SHIELD, Oil
1576	597036	1	SCREW -(Oil Shield)
1620	84008367	1	GASKET SET, Crankcase

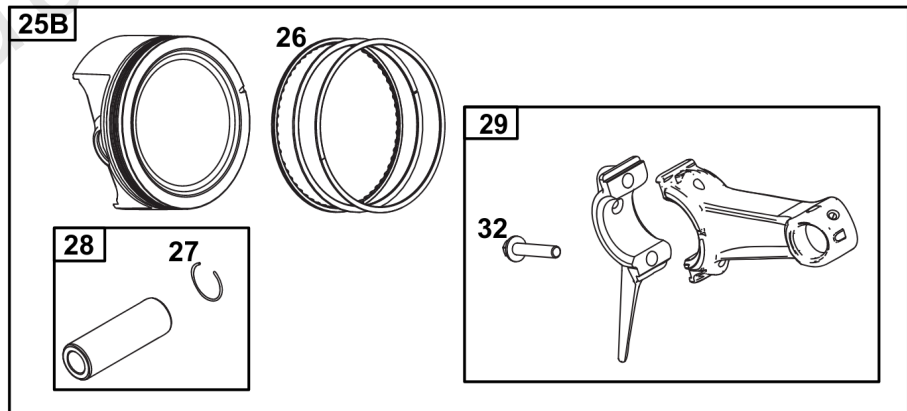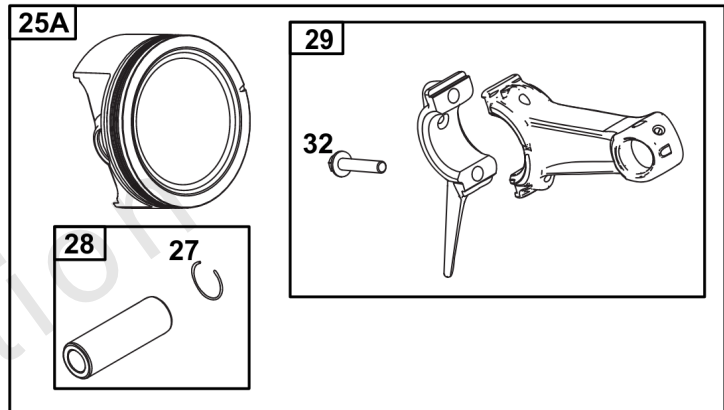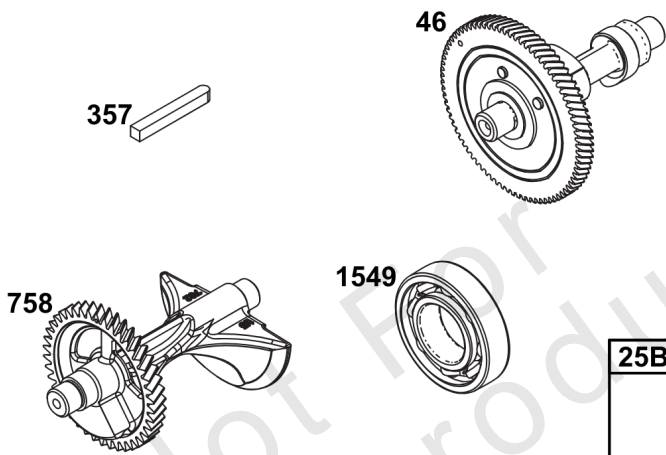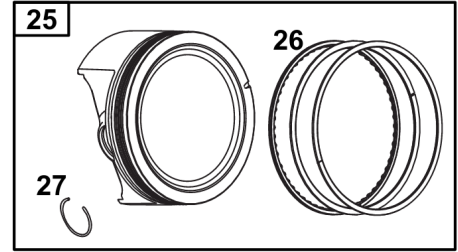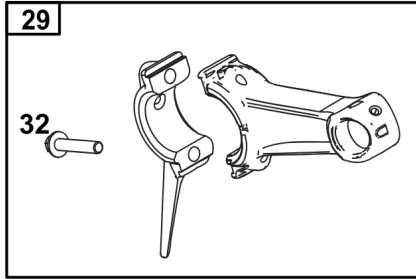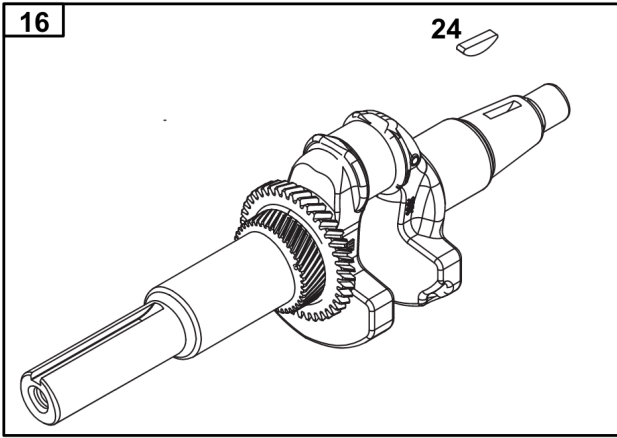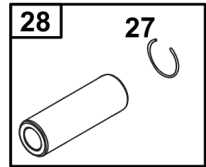




## Crankshaft Group

REF NO	PART NO	QTY	DESCRIPTION
16	84003579	1	CRANKSHAFT
24	596976	1	KEY, Flywheel
25	84005038	1	PISTON ASSEMBLY -(Use After Date Code 20120700)
25	84005037	1	PISTON ASSEMBLY -(.020" Oversize)(Use After Date Code 20120700)
25A	84006577	1	PISTON ASSEMBLY -(Use Before Date Code 20120800)
25B	84006578	1	PISTON ASSEMBLY -(.020" Oversize)(Use Before Date Code 20120800)
26	84004091	1	SET, Ring
26	84004097	1	SET, Ring -(.020" Oversize)
27	84005040	2	LOCK, Piston Pin
28	84005039	1	PIN, Piston -(Use After Date Code 20120700)
29	84005041	1	ROD, Connecting -(Use After Date Code 20120700)
32	596984	2	SCREW -(Connecting Rod)
46	84005044	1	CAMSHAFT
357	591054	1	KEY, Drive Pulley
758	84004464	1	COUNTERWEIGHT
1549	84003459	1	BEARING, Ball -(Crankshaft)

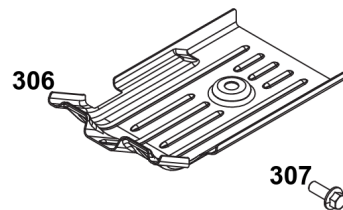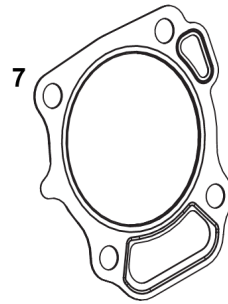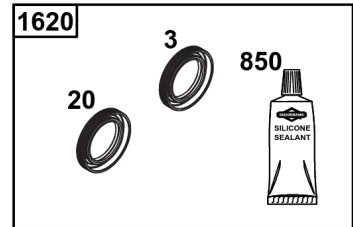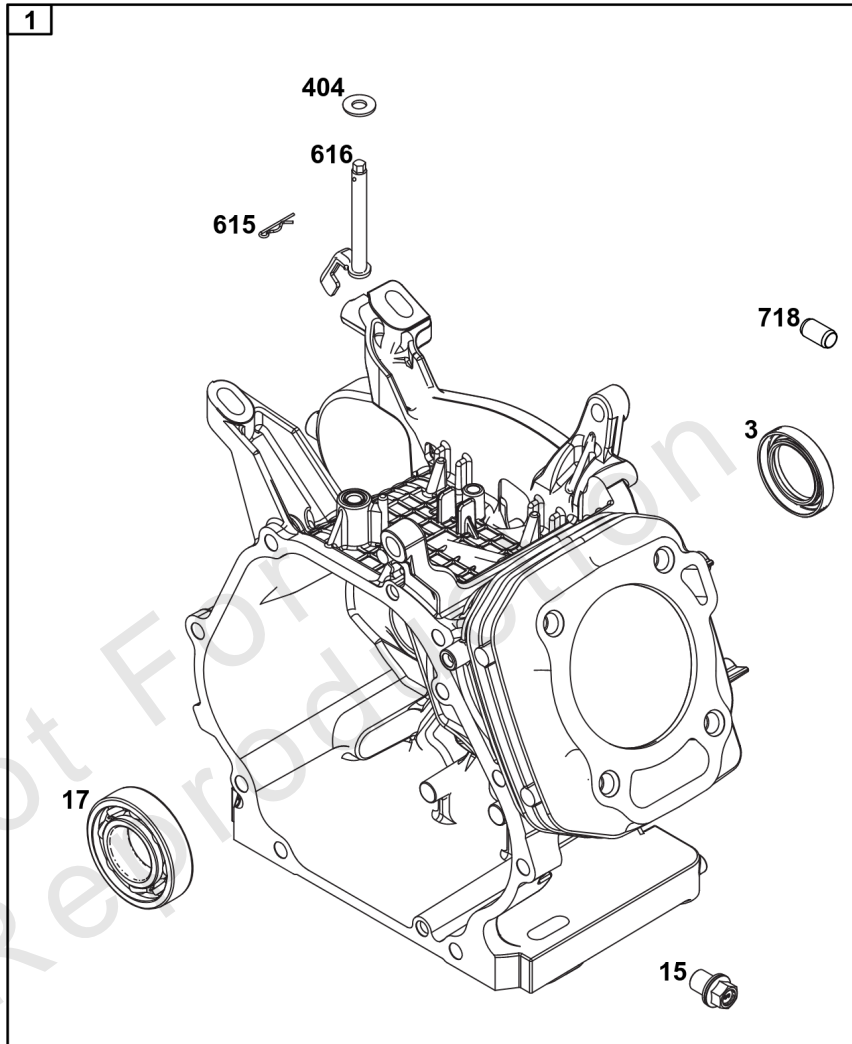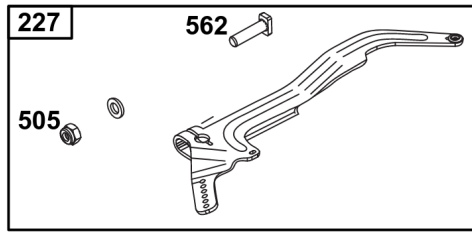


## Cylinder Group

REF NO	PART NO	QTY	DESCRIPTION
1	84004373	1	CYLINDER ASSEMBLY
3	84004101	1	SEAL, Oil -(Magneto Side)
7	-----	1	GASKET, Cylinder Head -(Part information located in Cylinder Head Group.)
15	84004108	2	PLUG, Oil Drain
17	84004100	1	BEARING, Ball -(Cylinder)
20	-----	1	SEAL, Oil -(Part information located in Crankcase Cover/Sump and Lubrication Group.)
227	-----	1	LEVER, Governor Control -(Part information located in Controls Group.)
306	84004123	1	SHIELD, Cylinder
307	590850	1	SCREW -(Cylinder Shield)
404	84004197	1	WASHER -(Governor Crank)
505	-----	1	NUT -(Part information located in Controls Group.)
562	-----	1	BOLT -(Part information located in Controls Group.)
615	84004198	1	RETAINER, Governor Shaft
616	84004196	1	CRANK, Governor
718	84004120	2	PIN, Locating
718A	590713	2	PIN, Locating
799	590703	2	SCREW -(Oil Sensor)
850	100106	1	SEALANT, Liquid
1620	-----	1	GASKET SET, Crankcase -(Part information located in Crankcase Cover/Sump Group.)

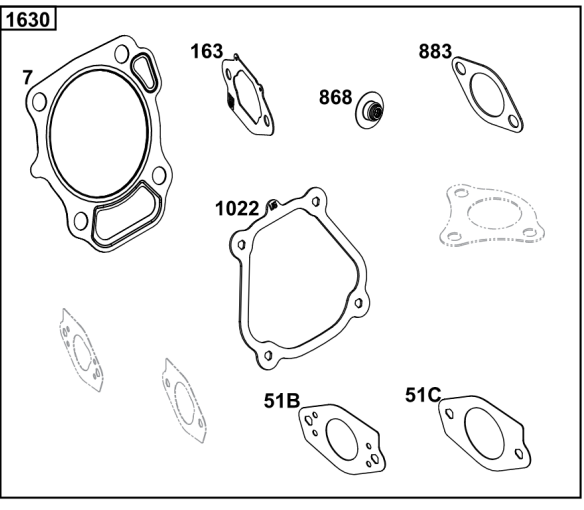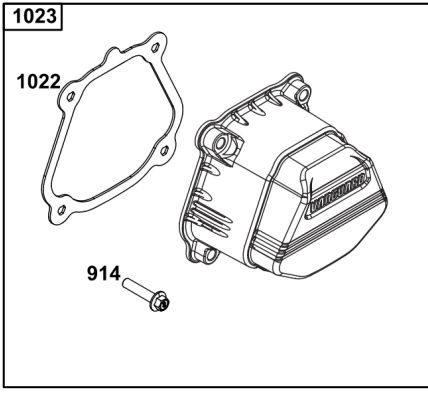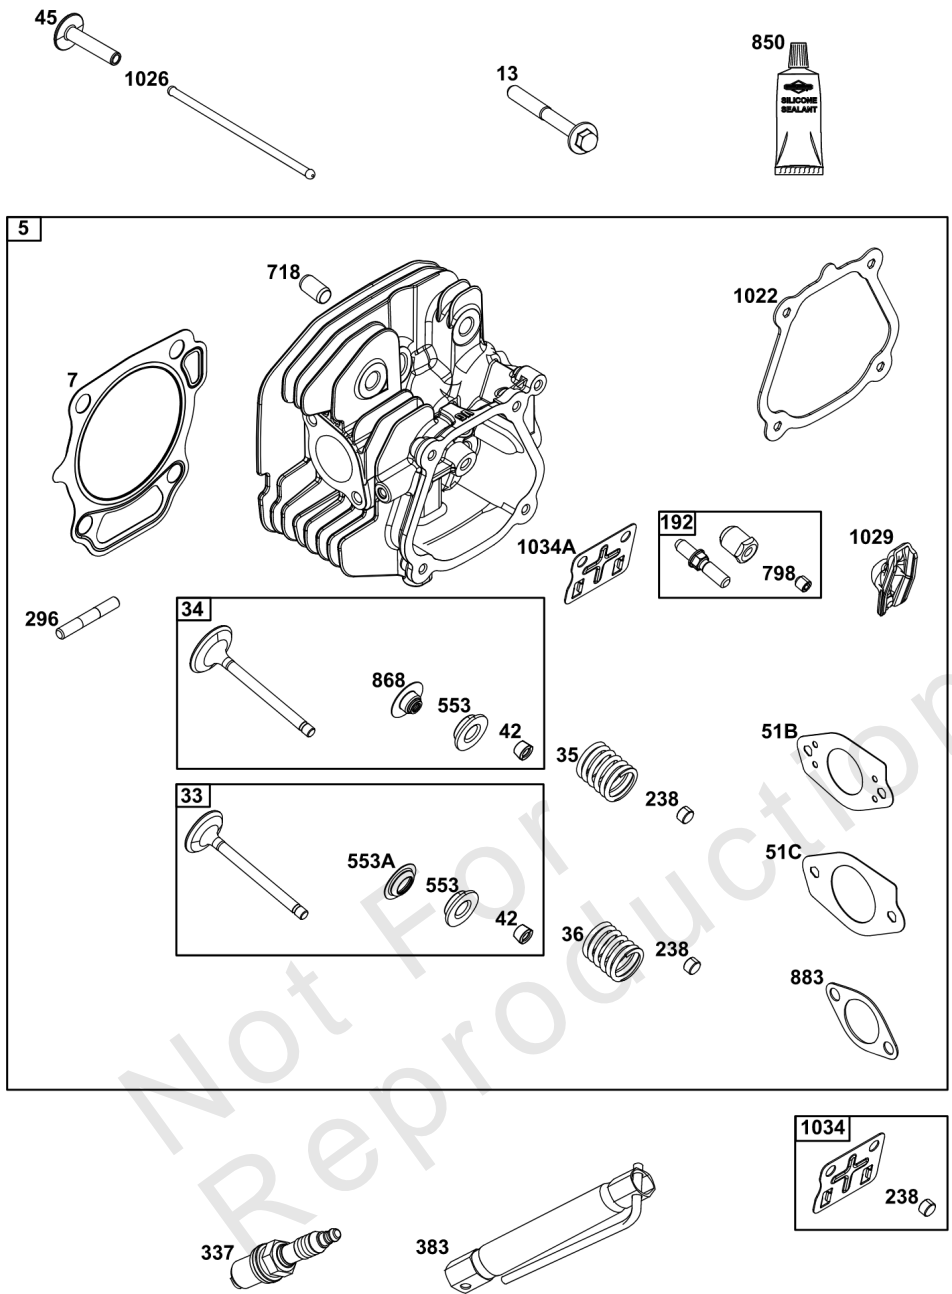

## Cylinder Head Group









REF NO	PART NO	QTY	DESCRIPTION
5	84005042	1	HEAD, Cylinder
7	84004760	1	GASKET, Cylinder Head
13	84004122	4	SCREW -(Cylinder Head)
33	84004114	1	VALVE, Exhaust
34	84004113	1	VALVE, Intake
35	84004112	2	SPRING, Valve -(Intake)
36	84004112	2	SPRING, Valve -(Exhaust)
42	84004116	4	KEEPER, Valve
45	84004130	2	TAPPET, Valve
51B	84004164	1	GASKET, Intake
51C	84004166	1	GASKET, Intake
163	-----	1	GASKET, Air Cleaner -(Part information located in Carburetor Group.)
192	84006535	2	ADJUSTER, Rocker Arm
238	84004109	2	CAP, Valve
296	84004119	2	STUD -(Muffler)
337	597383	1	PLUG, Spark
383	19576S	1	WRENCH, Spark Plug
553	84004117	2	RETAINER, Valve Spring
553A	84004118	1	RETAINER, Valve Spring
718	-----	2	PIN, Locating -(Part information located in Cylinder Group.)
798	597000	2	SCREW -(Rocker Arm)
850	-----	1	SEALANT, Liquid -(Part information located in Cylinder Group.)
868	84004111	1	SEAL, Valve
883	-----	1	GASKET, Exhaust -(Part information located in Exhaust Group.)
914	597016	4	SCREW -(Rocker Cover)
1022	84004126	1	GASKET, Rocker Cover
1023	84005291	1	COVER, Rocker
1026	84004129	2	ROD, Push
1029	84004110	2	ARM, Rocker
1034	84006550	1	GUIDE, Push Rod -Used Before Code Date 20092400
1034A	84005043	1	GUIDE, Push Rod -Used After Code Date 20092300
1630	84012627	1	GASKET SET, Valve -(Service Kits can include parts not for this engine.)

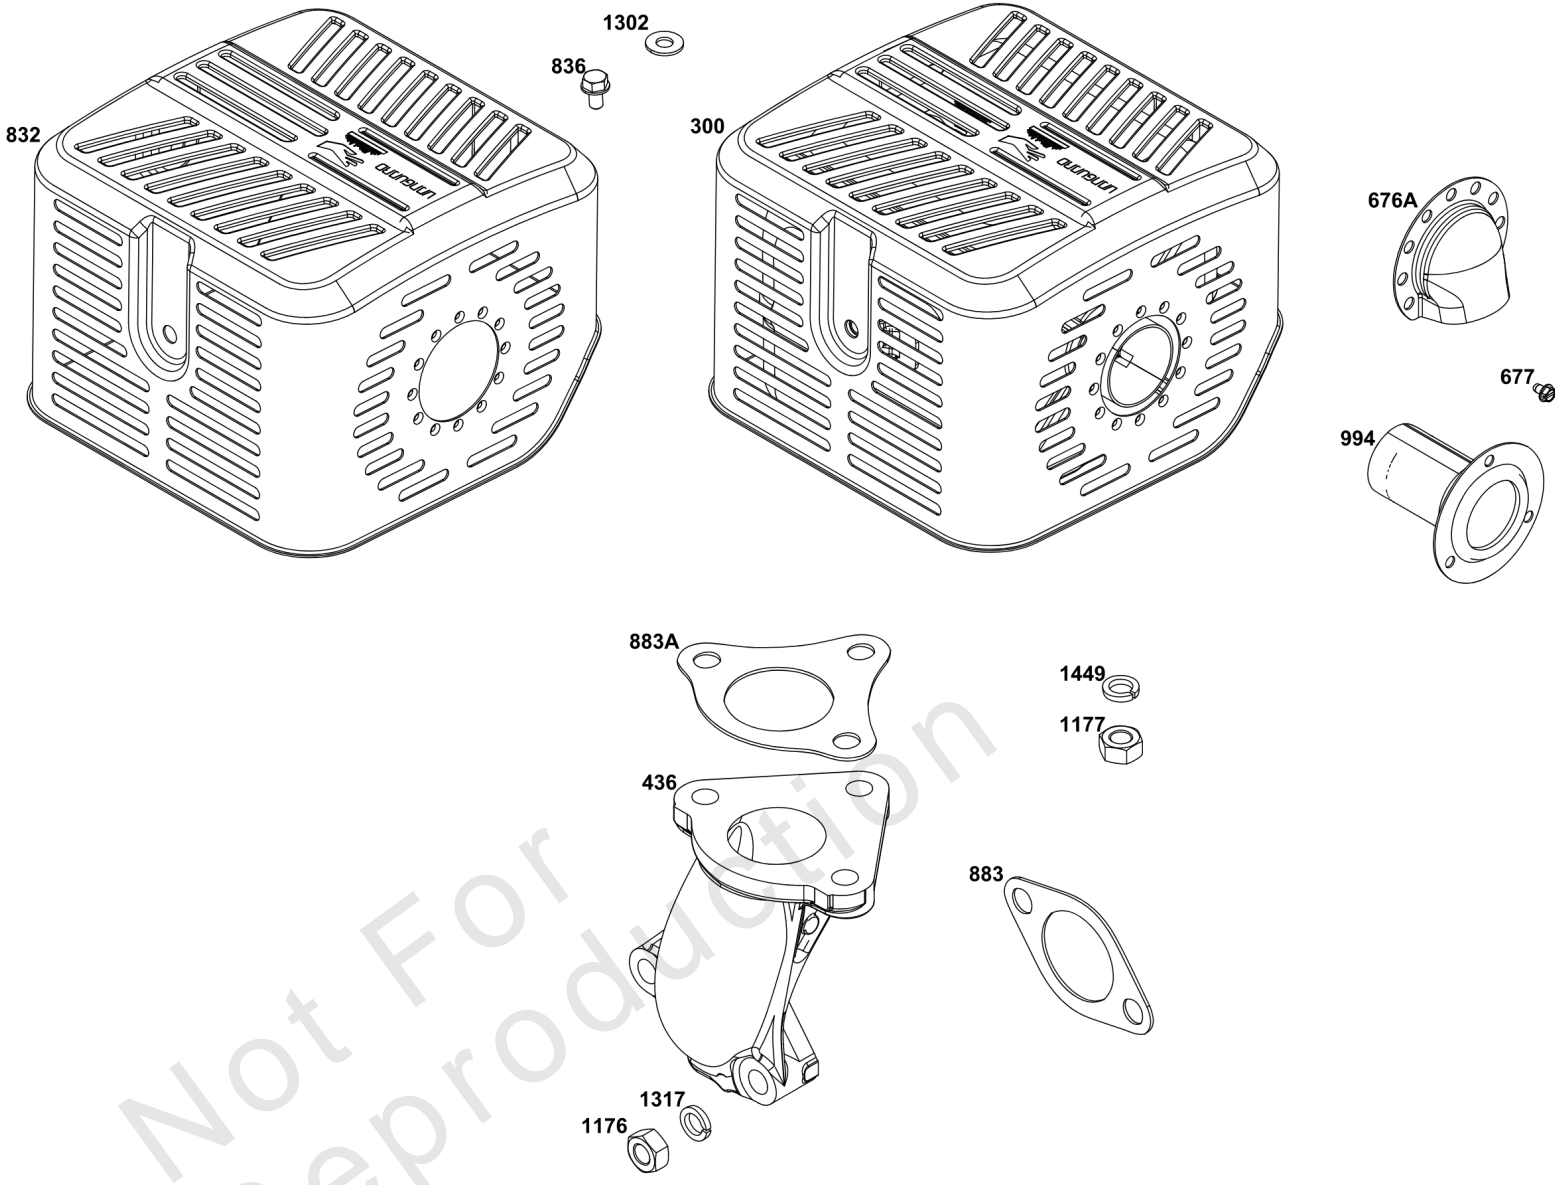

Not For  
Reproduction






## Exhaust Group

REF NO	PART NO	QTY	DESCRIPTION
300	84004466	1	MUFFLER
436	84004461	1	MANIFOLD, Exhaust
676A	84004474	1	DEFLECTOR, Muffler
677	699203	3	SCREW -(Muffler Deflector)
832	84004462	1	GUARD, Muffler
836	84005121	3	SCREW -(Muffler Guard)
883	84004409	1	GASKET, Exhaust
883A	84004280	1	GASKET, Exhaust
994	793985	1	ARRESTOR, Spark
1176	590632	2	NUT -(Exhaust Manifold)
1177	590632	3	NUT -(Muffler)
1302	84004197	3	WASHER -(Muffler Guard)
1317	590633	2	WASHER -(Exhaust Manifold)
1449	590633	3	WASHER -(Muffler)

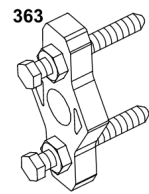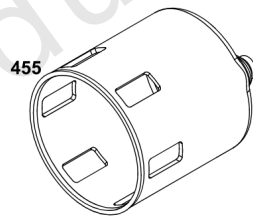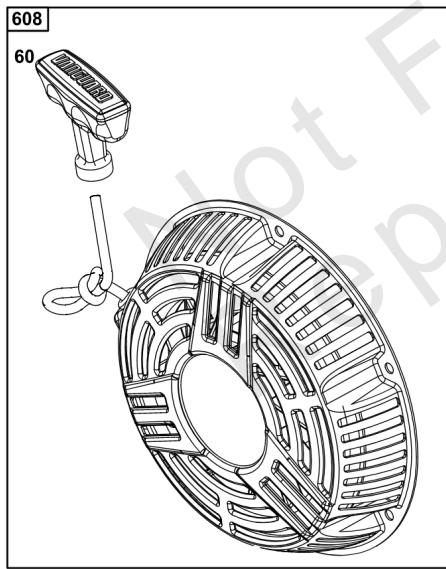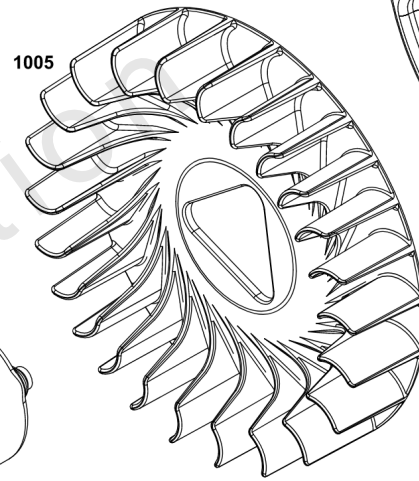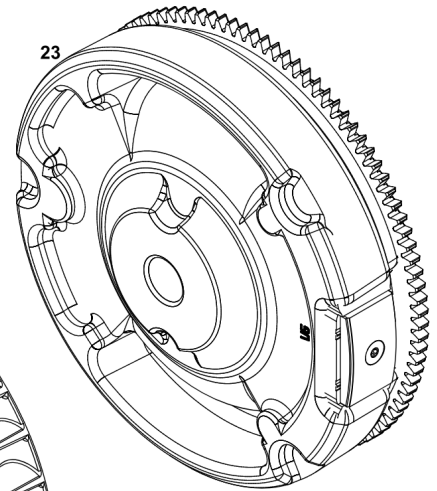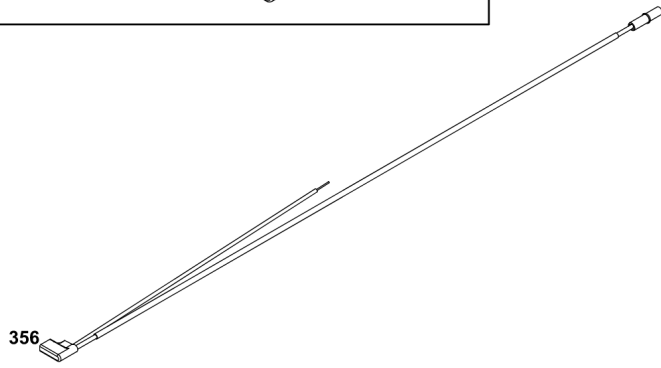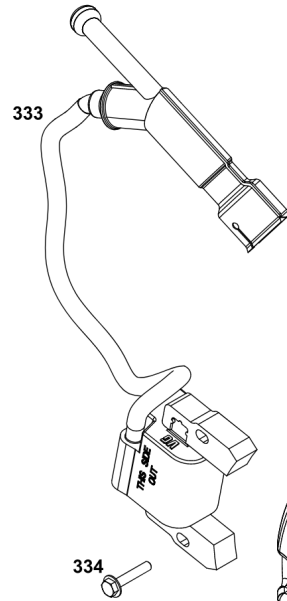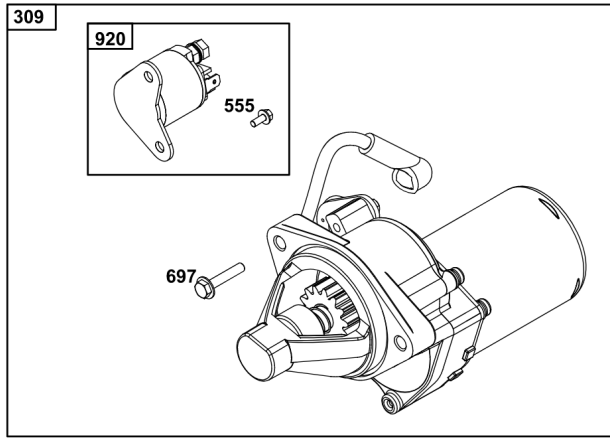

## ***Flywheel, Ignition, and Starter Group***

<b>REF NO</b>	<b>PART NO</b>	<b>QTY</b>	<b>DESCRIPTION</b>
23	84004285	1	FLYWHEEL
60	597080	1	GRIP, Starter Rope
65	590683	3	SCREW -(Rewind Starter)
309	84004169	1	MOTOR, Starter
332	591988	1	NUT -(Flywheel)
333	84004162	1	ARMATURE, Magneto
334	699477	2	SCREW -(Magneto Armature)
356	84004210	1	WIRE, Stop
363	19203	1	PULLER, Flywheel
455	84004287	1	CUP, Flywheel
555	597012	2	SCREW -(Starter Solenoid)
608	84004174	1	STARTER, Rewind
697	84004281	2	SCREW -(Starter Motor) (Drive Cap)
920	84007143	1	SOLENOID, Starter
1005	84004286	1	FAN, Flywheel

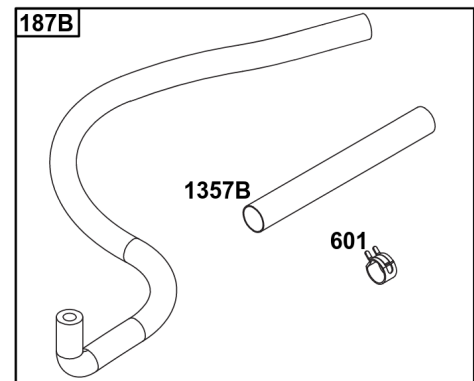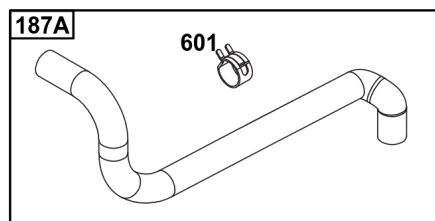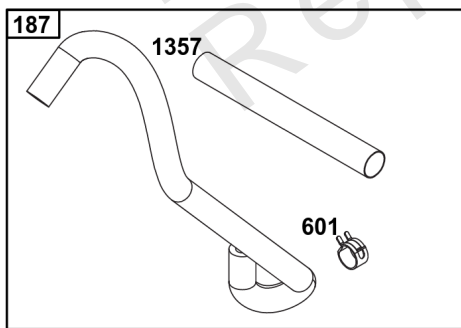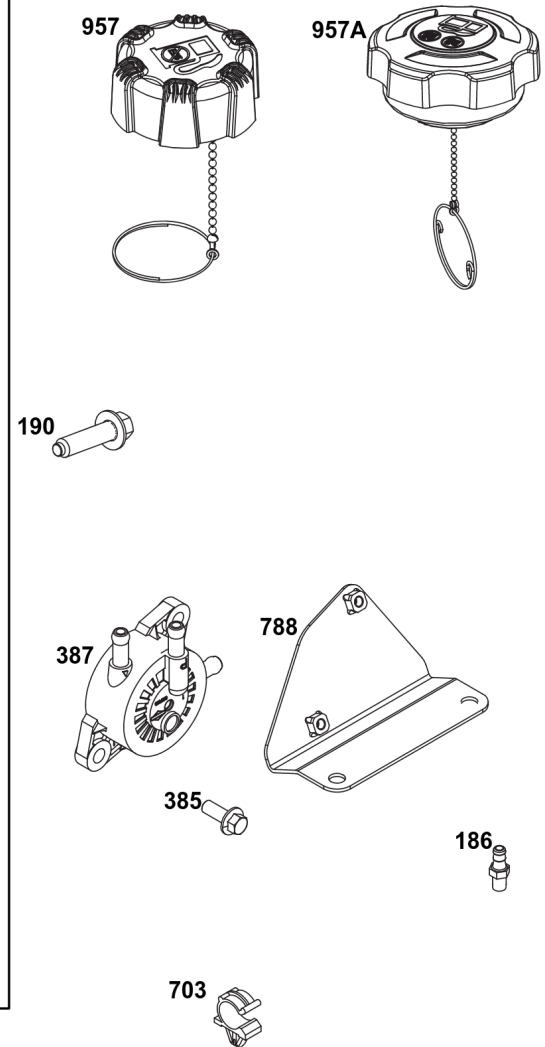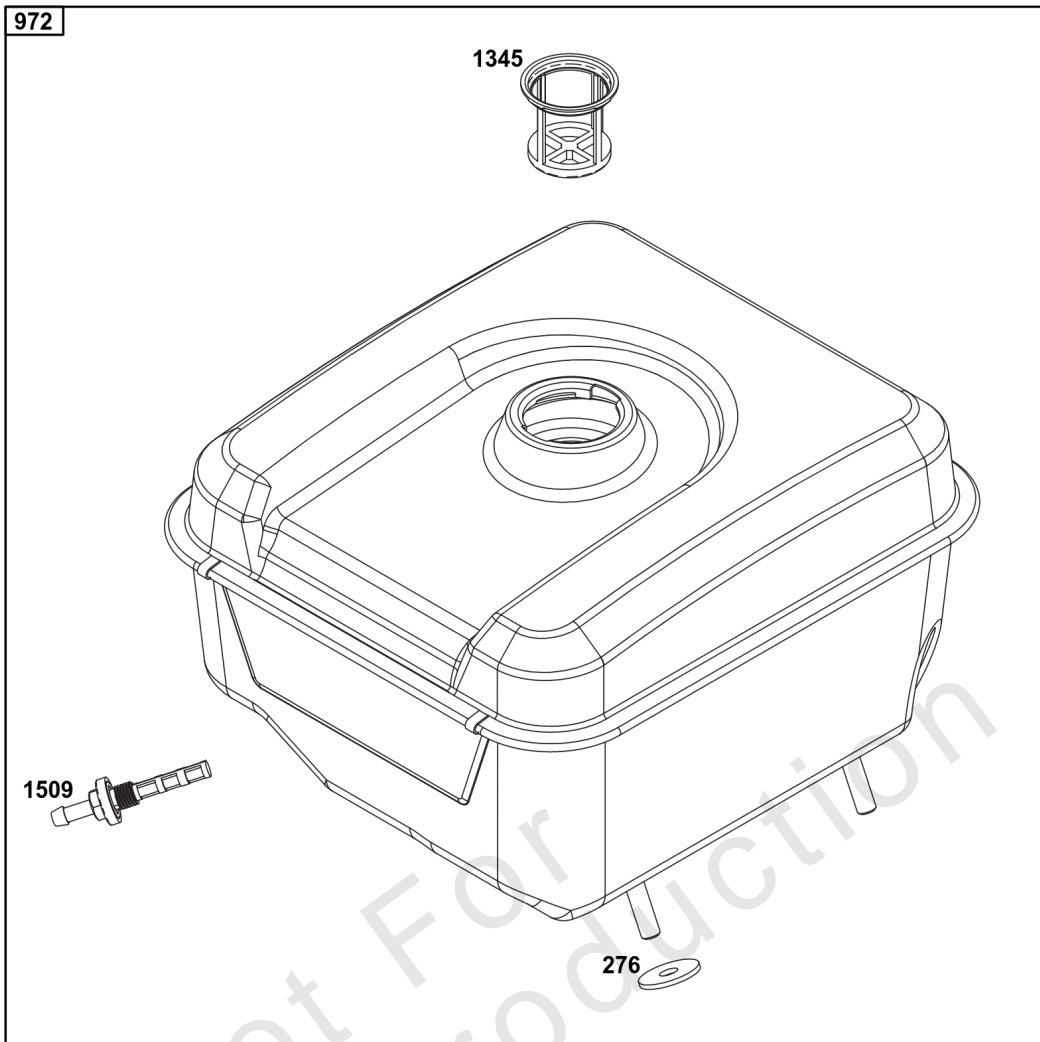

## Fuel Supply Group

REF NO	PART NO	QTY	DESCRIPTION
186	691764	1	CONNECTOR-HOSE
187	84004251	1	LINE, Fuel
187A	84004193	1	LINE, Fuel
187B	84004194	1	LINE, Fuel
190	84004226	2	SCREW -(Fuel Tank)
276	84004253	2	WASHER, Sealing
385	590703	2	SCREW -(Fuel Pump)
387	597338	1	PUMP, Fuel
601	791850	2	CLAMP, Hose
703	84004255	2	CLIP
705	707919	2	NUT -(Fuel Tank)
788	84004473	1	BRACKET, Fuel Pump
957	596765	1	CAP, Fuel Tank -Used Before Code Date 22010100
957A	84007570	1	CAP, Fuel Tank -Used After Code Date 21123100
972	84004212	1	TANK, Fuel
1345	792917	1	FILTER, Filler Neck
1357	590688	1	SLEEVE, Fuel Line
1357B	590688	1	SLEEVE, Fuel Line
1509	797346	1	OUTLET, Tank

